

The Studica Robotics STEM BOT Pro Kit Build Guide

The Studica Robotics STEM BOT Pro Kit allows students to explore the possibilities of STEM and mobile robotics in various applications from basic to advanced concepts. This kit is available at https://www.studica.com/studica-robotics-brand/stem-bot-pro-kit.

These build instructions will walk you through the steps of building the STEM BOT Pro robot. This is example of what the competed project will look like.





Table of Contents:

- STEM-BOT Build Instructions pg. 3-10
 - Frame Assembly pg. 3-4
 - Back Wheels Assembly pg. 4-5
 - Front Wheels & Battery Mount Assembly pg. 5-6
 - Base Plate & Electronics Assembly pg. 7-8
 - Wiring Guide pg. 9
 - Software Setup for Programming your Robot pg. 10
 - Installing WPILib & VS Code pg. 10
 - For Windows 11: FRC Driver Station pg. 10
 - Programming your STEM BOT pg. 11-12
 - Configuring the project for VMXpi pg. 11
 - Deploying Code pg. 11-12
 - Adding Vendor Libraries pg. 12
- STEM BOT Parts List pg. 13 -19
 - 3D CAD files for all parts are available at <u>www.studica.com/studica-robotics-</u> resources
 - About the VMX Robotics Controller pg. 20
 - Helpful Resources: Example of Code used for the VMX pg. 20
 - Troubleshooting for VMX: Updating Firmware pg. 20
 - VMX: Channel Block pg. 21
 - About the Titan Quad Motor Controller pg. 22
 - Titan: Map of Ports and Inputs pg. 22-23
 - Titan Status Light pg. 24
 - About the Maverick DC Motors pg. 25



STEM BOT Build Instructions:

This is a step-by-step guide for assembling the STEM-BOT along with an example of programming a two-wheel drive with the VMX. The example code is found here: <u>https://github.com/studica/WorldSkills-Example-Projects/tree/main/TwoWheelDrive</u> in both Java and C++. In Java it is contained in the src/main folder.

Frame Assembly:

Step 1: Attach the End Piece Plates to the ends of both 192mm U-Channels using the M3 x 10mm Button Head Cap Screws

Step 2: Attach the End Piece Plates of the 192mm U-Channels to the 432mm U-Channels using 4 M3 x 10mm Socket Head Cap Screws each.



Step 3: Place 4 Rubber U-Channel Bumpers to each end of the 432mm U-Channels

Step 4: Attach the Maverick DC Motor to the Motor Mount Plate using 6 M3 x 10mm Button Head Cap Screws:

Step 5: Attach 1 30 Tooth Bevel Gear onto the shaft of the Maverick Motors (Do not tighten set screws)



Back Wheels Assembly:

Step 6: Attach the motors to the Frame by having the recess into 432mm U-Channels and using the M3 x 12mm Socket Head Cap Screws (Repeat for other side of frame).

Step 7: Place 14mm Bearings onto the 14mm hole patterns of the 432mm U-Channel that are perpendicular to the end of the Maverick Motor's shaft (Repeat for other side of frame).



Step 8: Insert the 6mm x 96mm D-Shaft through the bearings as well as a 30 Tooth Bevel Gear. This gear as well as the gear mounted on the Maverick Motor shaft should both be positioned so that they mesh well with one another, once they do, tighten the gears to their shafts with their set screws.

Step 9: Attach a 6mm D-Shaft Collar Clamp on one end of the 6mm x 96mm D-Shaft with a 1mm Thick Shaft Spacer between the collar and bearing.

Step 10: Place two 5mm Thick Shaft Spacers then one Clamping Shaft Hub-v2 onto the 6mm x 96mm D-Shaft and secure the shaft hub using the set screws.

Step 11: Use 4 M3 x 12mm Socket Head Cap Screws to Attach the 100mm Drive Wheel to the Clamping Shaft Hub (repeat for other side of frame)



Front Wheels & Battery Mount Assembly:

Step 12: Stack two 288mm x 40mm Flat Brackets on top of one another and attach them to the frame using four M3 x 30mm Screws and four Kep Nuts on each side.

Step 13: Attach two 25mm Male to Female Standoffs to each Batter Clip with two M3 x 10mm Socket Head Cap Screws. Then secure the Battery Clips to the 288mm x 40mm Flat Brackets



Step 14: The 100mm Omni Wheel comes with its own shaft hub. Attach a 6mm x 96mm D-Shaft into the shaft hub and tighten with the set screws. Once tightened, screw the Hub onto the Omni-Wheel (repeat for other side of frame)





Step 15: Place two 14mm OD Bearings onto each side of the hole patterns of the 432mm U-Channels (Repeat for other side of frame)

Step 16: Insert the Omni Wheel Shaft through the bearings with a 1mm Thick Shaft Spacer between the bearing and shaft hub. (Repeat for other side of frame)

Step 17: Attach a Collar Clamp to the opposite end of the D-Shaft with a 1mm Thick Spacer between the clamp and U-Channel and secure by tightening the set screw. (Repeat for other side of frame)





Base Plate & Electronics Assembly:

Step 18: Secure the Titan Quad Motor Controller to the Base Plate using 4 M3 x 30mm Socket Head Cap Screws and 4 M3 Kep Nuts".

Step 19: Secure the VMX Robotics Controller to the Same Base Plate using 4 M3 x 30mm Socket Head Cap Screws and 4 M3 Kep Nuts



Important: Refer to the Wiring Guide on page 9 before completing assembly.

Step 20: Align the Base Plate with the VMX and Titan so that the Titan is towards the back of the robot frame and the hole pattern aligns with the back 192mm U-Channel and the 432mm U-Channels. When aligned properly, screw 2 M3 x 12mm through the base plate and robot frame to the Motor Mount Plate





Step 21: Attach the Base Plate to the frame of the robot by screwing 4 96mm T-Slot Extrusions to the frame and baseplate using 4 M3 x 12mm Socket Head Cap Screws for each extrusion. Then 2 M3 x 12mm Socket Head Cap Screws



Step 22: Attach another Base Plate to the extrusions using four M3 x 12mm Socket Head Cap Screws





Wiring Guide

The Titan Wire Pack contains the required cables and wires to power the VMX and provide communication between the Titan and VMX. The two devices communicate with one another via CAN (Control-Area-Network) Bus Cable (Green Low, Yellow High)

Step 23: Connect the power cable to the power output port on the Titan to the power port of the VMX. This allows for the Titan to distribute power to the VMX.

Step 24: Connect the Powerpole 45 Extension cable to the power input port of the Titan.

Step 25: Connect the green cable to the Green (L) port of the Titan and L (GRN) port of the VMX and connect the yellow cable to the Yellow (H) port of the Titan and the H(YEL) port of the VMX.

Step 26: Connect the Left Motor and Encoder cables to the M0 port. Then connect the Right Motor cables and encoder cables to the M2 port.



Step 27: Place the Battery in between the battery clips and connect it to the Powerpole 45 Extension Cable.





Software Setup for Programming your Robot

Installing WPILib & VS Code:

To install WPILib, access our international website here: <u>https://www.studica.co/resources-4</u> and click on the <u>"Download all the Studica Robotics Resources"</u> link:

→ C ଲ	studica.co/resources	s-4									☆	Ð	₹	0	;
	Studica	SHOP	EVENTS	RESOURCES	NEW PRODUCTS	HARDWARE	International (USD) v	Select Language	~		≗ My Account				
	ALL CATEGORIES				Search store				٩	=	(0) Quote				
	<u>Studica Robotics 31</u> here (Patented). Yo	<u>D CAD Files</u> - ou can use so	For anyone	e designing their ro ng software such a	obot or automation syst as PTC Onshape, Solidw	em using our Stuc orks, and Fusion 3	ica Robotics Construction : 50 to open and work with t	Set, you can find all hese files.	the 3D S	tep File	es				
	Download all the S	itudica Roboti	ics Resourc	es. +											

Find the appropriate operating system you are using (Windows, macOS, Linux) and install the zip files for VSCode and WPILib. The installation files can be alternatively found through the WorldSkills Technical Documentation & Software resources on Studica's International website: https://www.studica.co/resources-4

For Windows 11: FRC Driver Station

For Windows 11 users, FRC Driver Station is the interface software used to access and communicate with the robot. To download, click here to access the FRC Game Tools components: <u>https://www.ni.com/en/support/downloads/drivers/download.frc-game-tools.html#500107</u> and download the latest version.



Programming your STEM BOT

Configuring the project for VMXpi

The VMXpi Extension must be installed so the VMX can be the deployment target. In the extensions tab, click on the search bar and enter "VMX-pi":

VMX-PI VMX-PI WPILIB 100 Tools to simplify the VMX-PI WP KauaiLabs	Details Contributions	A-Pi WPILib Kauailabs.vmxpi abs Φ 3,771 ☆☆☆☆☆ Repository simplify the VMX-Pi WPILib experience Uninstall This extension is enabled globally:	
		VMXVSCodeExtension	
		Installation	
		Download directly from the VSCode Extension Marketplace OR Download the latest vsix file from the root folder of this repo Open VSCode, in the Extensions window, find "Install from VSIX" Select the downloaded vsix file to install Usage	
		The extension's commands can be accessed through the VMX icon in the Quick Access Toolbar (top right) or the Command Pallete (opened with Ctrl+Shift+P) All commands are located under the VMX-Pi category	

Install this extension and it should appear next to the WPILib logo.

Deploying Code:

To deploy your code to the VMX, click on the VMX-Pi logo:





>VMX-Pi:

VMX-Pi: Change the deploy target to VMX-Pi (from RoboRIO)

recently used

VMX-Pi: Verify the Project's build.gradle file

VMX-Pi: Update WPILib Version

VMX-Pi: Change the deploy target to RoboRIO (from VMX-Pi)

Clicking the "Change the deploy target to VMX-Pi (from RoboRio)" will update the build.grade file to update the target as the VMXpi and cache any missing libraries.

>WPILib	*	令	س
WPILib: Deploy Robot Code Shift + F5 recently used			
WPILib: Manage Vendor Libraries	.vn	nxpi	

To deploy the code to the VMX, click on the WPILib Logo and click on the command "Deploy Robot Code",

Adding Vendor Libraries

The vendor libraries supported on the VMXpi are below. To install these libraries on VS Code, open the command palette using Ctrl+Shift+P or F1. Type into the command palette "<u>Manage</u> <u>Vendor Libraries</u>", Select Install new libraries(online), copy and paste the links into the command palette and press Enter.

NavX Library: https://dev.studica.com/releases/2023/NavX.json

Titan Library: http://dev.studica.com/releases/2020/Studica.json



STEM BOT Parts List

3D CAD files for all parts are available at <u>www.studica.com/studica-robotics-resources</u>

Name	Part #	Qty	Image
Electro	nics & Acces	sories	
12V 3,000 mAh NiMH Battery Pack, PP45	<u>70018</u>	1	Hereiter
NiMH Battery Pack Charger – PP45	<u>70019</u>	1	
Robotics Toolbox, Grey	70057	1	Studion
Remote Control	70112	1	



Titan Quad Motor Controller	70152	1	
Titan Cable Pack	70162	1	6
VMX Robotics Controller	<u>70176</u>	1	and the second
Maverick 12V DC Gear Motor w/Encoder	75001	2	
432mm U-Channel	<u>76010</u>	2	
			A CONTRACTOR OF THE OWNER



192mm U-Channel	<u>76015</u>	2	A CONTRACTOR
I	Flat Brackets	5	
288mm x 40mm Flat Bracket (2 pack)	<u>76061-2</u>	1	
Robot Base Plate	<u>74001</u>	2	
	Extrusions		•
96mm T-Slot Extrusion	<u>76127</u>	4	
Irre	egular Brack	ets	
Battery Clip (2 pack)	<u>76088-2</u>	1	
M	ounting Plat	es	



Motor Mount Plate	<u>76140</u>	2	
End Piece Plate (2 pack)	<u>76143-2</u>	2	
	Axles	1	
	<u>70101-0</u>		
	Standoffs		
25mm Male to Female Standoff (12 pack)	<u>76184-12</u>	1	
Sci	rews and N	uts	
M3 x 10mm Socket Head Cap Screw (100 pack)	<u>76201-</u> <u>100</u>	1	Manager To



M3 x 12mm Socket Head Cap Screw (100 pack)	76202- 100	1	
M3 x 10mm Button Head Cap Screw (50 pack)	76203- 50	1	
M3 x 30mm Socket Head Cap Screw (50 pack)	76206- 50	1	À
M3 Kep Nut (100 pack)	76204- 100	1	
20 Taath Bayal Caar (2 pack)	Gears	2	
SU TOOTH BEVELGEAR (2 pack)	2	2	
	Wheels		



100mm Omni Wheel	76260	2	
100mm Drive Wheel	76262	2	
Bushings, Be	arings, Col	llars	s, & Spacers
Clamping Shaft Hub-v2	<u>76280</u>	2	
Collar Clamp	<u>76320</u>	4	
14mm Flange Bearing (12 pack)	<u>76302-</u> <u>12</u>	1	



Shaft Spacer 1mm, Nylon (24 pack)	76305- 24	1	
Shaft Spacer 5mm, Nylon (12 pack)	<u>76307-</u> <u>12</u>	1	
Rubber Grommet (10 pack)	<u>76504-</u> <u>10</u>	1	
U-Channel Bumper (4 pack)	<u>76505-</u> <u>4</u>	1	



About the VMX Robotics Controller

As the "brain" of a robot, the VMX Robotics Controller is a powerful, versatile Linux-based robot controller that offers compatibility with programming languages including Java, C++, Python, and LabVIEW, along with support for ROS. Integrated with the NavX-IMU and combined with the Titan Quad Motor Controller, the VMX acts as the powerful "brain" of your robot. Capable of programming for both tele-operated and autonomous controls. It also houses an integrated NavX IMU (Inertial-Measurement-Unit) for advanced movement performance in tele-op and autonomous driving.



Helpful Resources: Example of Code used for the VMX

This guide will go over an example project from Studica Robotics github, using the VMX. The example code can be found here: <u>https://github.com/studica</u>, in the WorldSkills-Example-Projects repository under the Popular Repositories.

Troubleshooting for VMX: Updating Firmware

Certain cases may require the firmware to be updated for the VMX to improve functionality or fix any bugs. To do so, use the following instructions on our WorldSkills resources page: <u>https://docs.wsr.studica.com/en/latest/docs/VMX/update.html</u>

A firmware update should be performed in case there are any issues with deploying your project to the VMX or issues with the connection between the driver station app and the VMX/Titan.



VMX: Channel Block



Connector Block	Connector Type	Location on VMX
Flex DIO Header	3-pin PWM-style	Left-side Top
High Current DIO Header	3-pin PWM-style	Left-side mid
Analog Input Header	3-pin PWM-style	Left-side bottom
Comm DIO Connectors	4-pin JST GH	Bottom-left
Flex DIO Connectors	4-pin JST GH	Bottom-middle
CAN Connector	2-wire Weidmuller	Bottom-right



About Titan Quad Motor Controller:

The Titan Quad Motor Controller is a 4 channel CAN-based motor controller. Combined with the VMX, the Titan acts the Power Distribution Panel (PDP) for your robot, primarily for the VMX.



Titan: Map of Ports and Inputs

- 1. Power input. Input requires a 12VDC battery, and two ports are available connected in parallel. Both ports can be used for increasing the capacity or as a battery in, battery out.
- 2. Power output. Outputs 12VDC out to other devices such as, VMXpi or Servo Power Block.
- Voltage indicators. There is a reverse power indicator (red) that will light up if the voltage is connected in reverse. The other two indicators display the voltage rails 5V and 3.3V.



- 4. Fusebox. Before voltage can be applied to the motors or power outputs (2), an appropriate fuse must be inserted into the box. Motors take 20A fuses, and power outputs take 5 15A fuses.
- 5. RGB Status Light.
- 6. DFU USB used to communicate with the computer for updates and configuration.
- 7. CAN-BUS Input High side (yellow) and Low side (green) inputs.
- 8. M1 Motor 1 output.
- 9. M0 Motor 0 output.
- 10. M3 Motor 3 output.
- 11. M2 Motor 2 output.
- 12. Boot used only when an error occurs, and Titan cannot communicate with the computer and needs a firmware upgrade.
- 13. NeoPixel addressable LED output
- 14. DotStar addressable LED output
- 15. Pin 13/ L for LED microcontroller
- 16. RX/TX LEDs for microcontroller
- 17. LED i2c com port for microcontroller
- 18. LED USB used to communicate with the computer for uploading code.
- 19. Encoder port Quadrature encoder input
- 20. Limit H High limit switch input. (Limits are pulled high and use hardware debouncing)
- 21. Limit L Low limit switch input. (Limits are pulled high and use hardware debouncing)



Titan Status Light

The RGB status light on the Titan will blink 3 times for various blink codes to indicate different functions of the Titan.

Status Light Blink Codes								
Function	Blink 1	Blink 2	Blink 3					
Titan Off / Update	*	*	*					
No Communication	*	*	*					
CAN Detected, Robot Disabled	*	*	*					
CAN Detected, Robot Enabled	*	*	*					
Fault Detected	*	*	*					



About the Maverick DC Motor:

The Studica Robotics Maverick 12V DC Gear Motor 61:1 w/Encoder is an ideal robot motor designed for strength to endure competitions, providing a stall torque of 708 oz-in.



Specifications:

Function	Min	Nom	Max
Input Voltage	-	12VDC	-
Gear Ratio	-	61:1	-
No Load RPM	88	100	112
No Load Current	-	600mA	-
Rated Speed	68	80	92
Rated Current	-	-	2.2A
Rated Torque	-	139 oz-in	-
Stall Current	-	-	11A
Stall Torque	708 oz-in	-	-
Direction	-	CW	-
Encoder Voltage	4	-	5
Encoder Current	-	6mA	-
Encoder CPR	-	6	-

Output Counts per Revolution of Output Shaft (cpr) 1,464